UBLOCKOUT



Setup Instructions

Motorized Shade + Remote Control



Content

- 1 Overview
- 2 Product Information
- 3 Setting up
- 4 Buttons
- 5 Adding shades to channels
- 6 Setting limits
- 7 Setting positions
- 8 Adjusting limits
- 9 Removing shades from channels
- 10 Troubleshooting motor issues
- 11 Support

Overview

Effortless control in your hands

Our helpful guide to motorization shows you how to operate and understand the features of a UBlockout motorized shade.

Before you begin, we recommend you prepare the remote safely and set up the basics.

Minimum set up

Read safety warnings

Connect remote battery

Assign shade to a channel

Set upper and lower limits

Recommended

Set a favourite position

Adjust upper and lower limits

Troubleshooting guide

Product Information

Specification

Battery voltage 3V (CR2450)

Frequency 433.92 MHz

Operating Temperatures -10°C to +50°C (14°F to 122°C)

Battery life 6 months with once daily operation

Transmission Distance Up to 35 m indoors (114.8 feet)

Dimensions 45 mm x 130 mm x 1.5 mm

Contents

1 x Remote control

1 x Wall mount holder and fixings

1 x Instruction manual

1 x Battery

Features

- Fifteen channels, plus "0" (all shades)
- LCD display
- Slimline wall mount

1

WARNING

Read safety instructions before installation

Failure to follow the installation instructions may lead to incorrect installation, potential injury, damage to product or property, and will void the manufacturer's liability and warranty.


- Avoid exposure to water, wet or humid conditions, and extreme temperatures.
- Individuals with reduced physical, sensory, or mental capabilities should not use this product without supervision.
- Do not tamper with or modify the product in any way, as this will void its warranty.
- Keep the product out of reach of children, particularly but not limited to the battery.
- Regularly inspect the product to ensure it is working correctly. Do not use if it is damaged or malfunctioning.
- Maintain a safe distance when the product is in use.
- Only replace the battery with the specified battery type.
- Do not operate the shade without setting both the upper and lower limits.

Setting up


Slimline wall mount — Magnetic remote holder

- Slide the cover of the wall mount up and slide the rear plate down at the same time.


2 Position the rear plate against the wall and mark the holes.

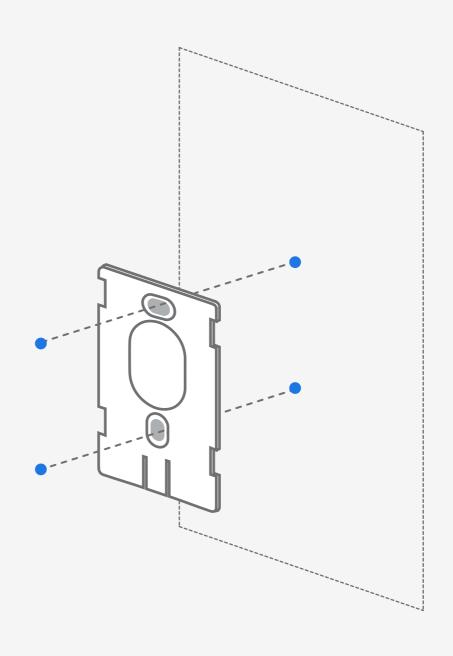

3 Drill the holes following the drill manufacturer's instructions.

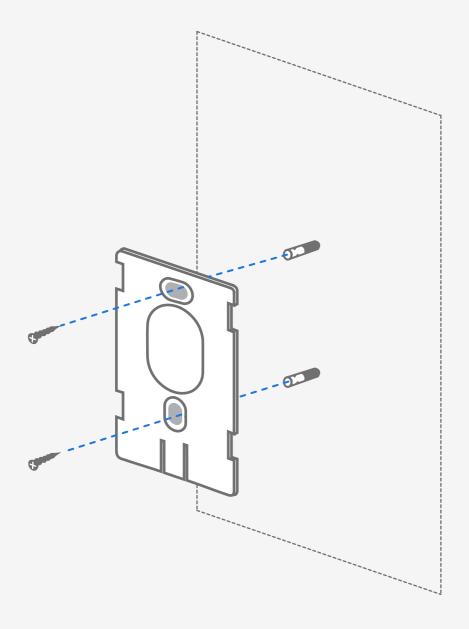


Fix the rear plate to the wall and reattach the cover.

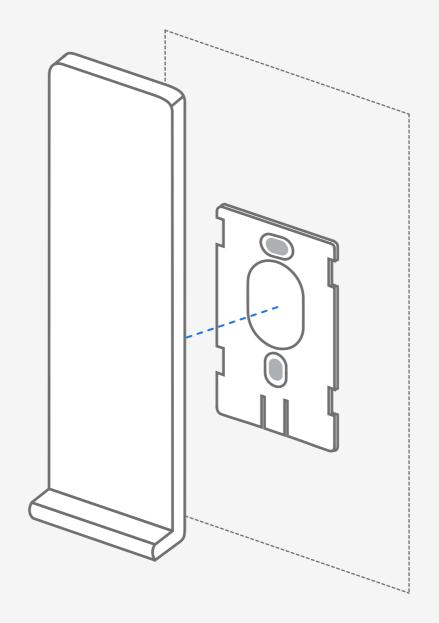


Setting up

Battery installation


- Push the safety latch on the back to
- release the battery cover using a pen or pointed object.

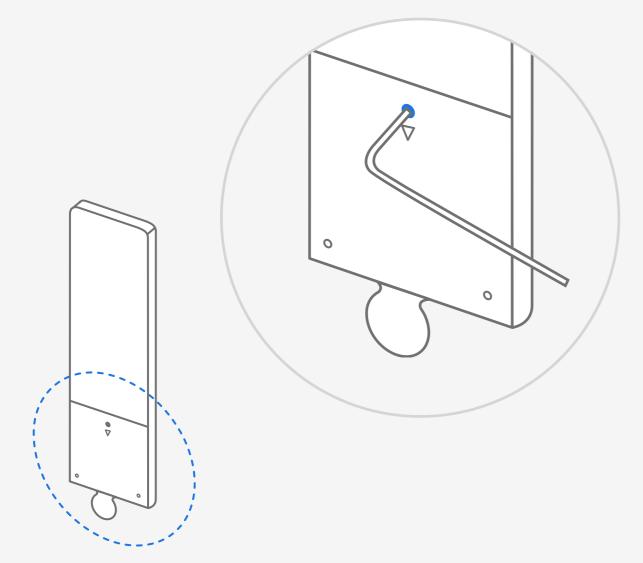

Slide the battery cover to open.

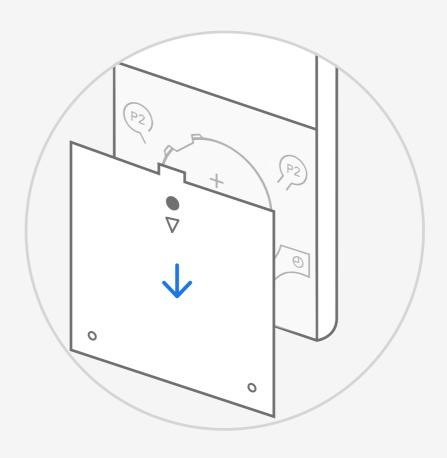


Remove the battery **before** removing the plastic contact tab.

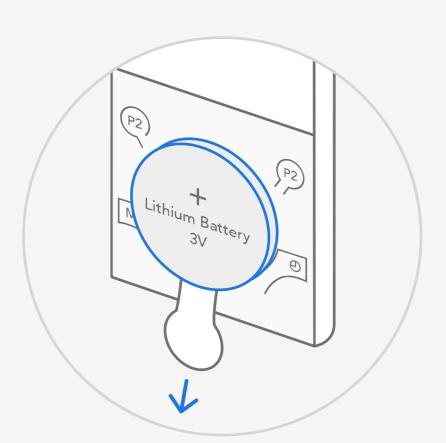


The contact tab may rip if the cover and battery have not been removed first.

Install the battery following the symbols inside the remote. Return the battery cover to close.

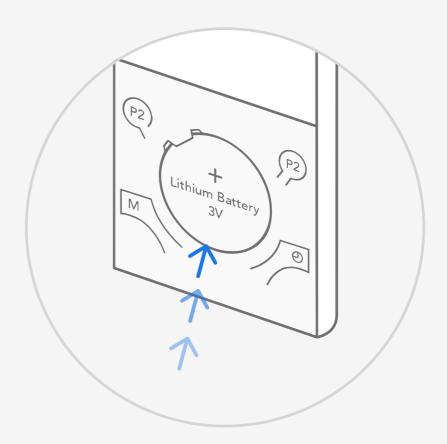

Buttons

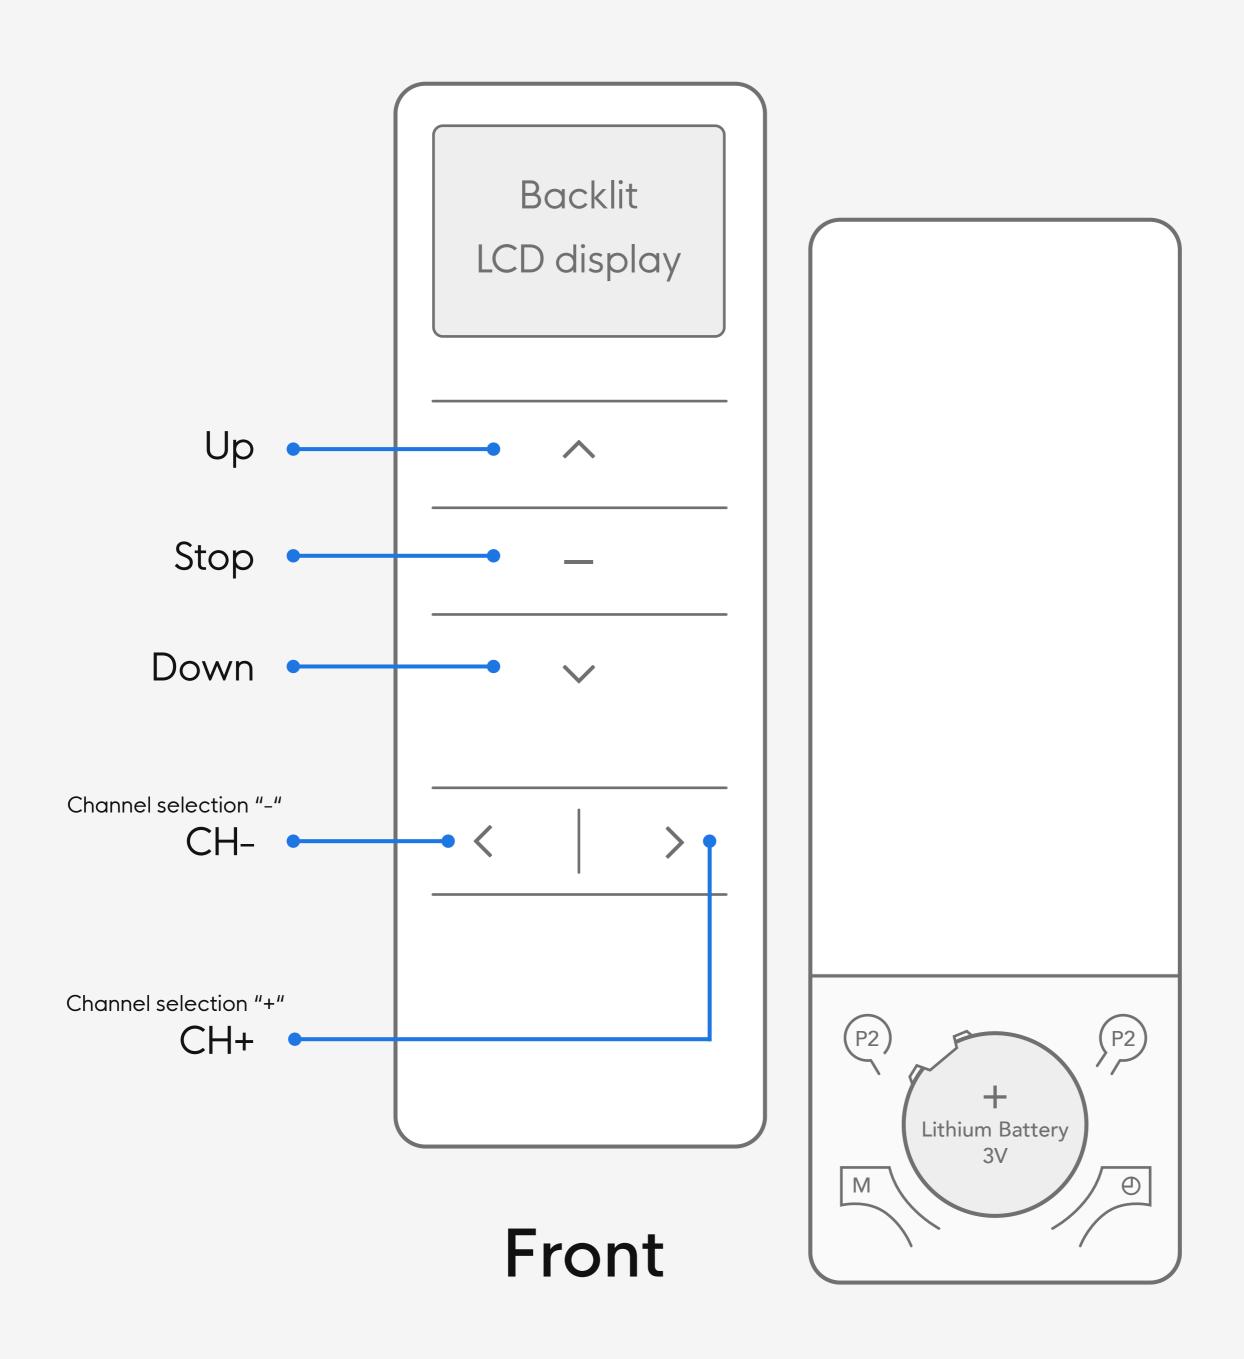


Back


? Group Control


Channel 0 is preset to control all blinds paired to your multi-channel remote control.

Adding shades to channels

Add shade to a remote control channel

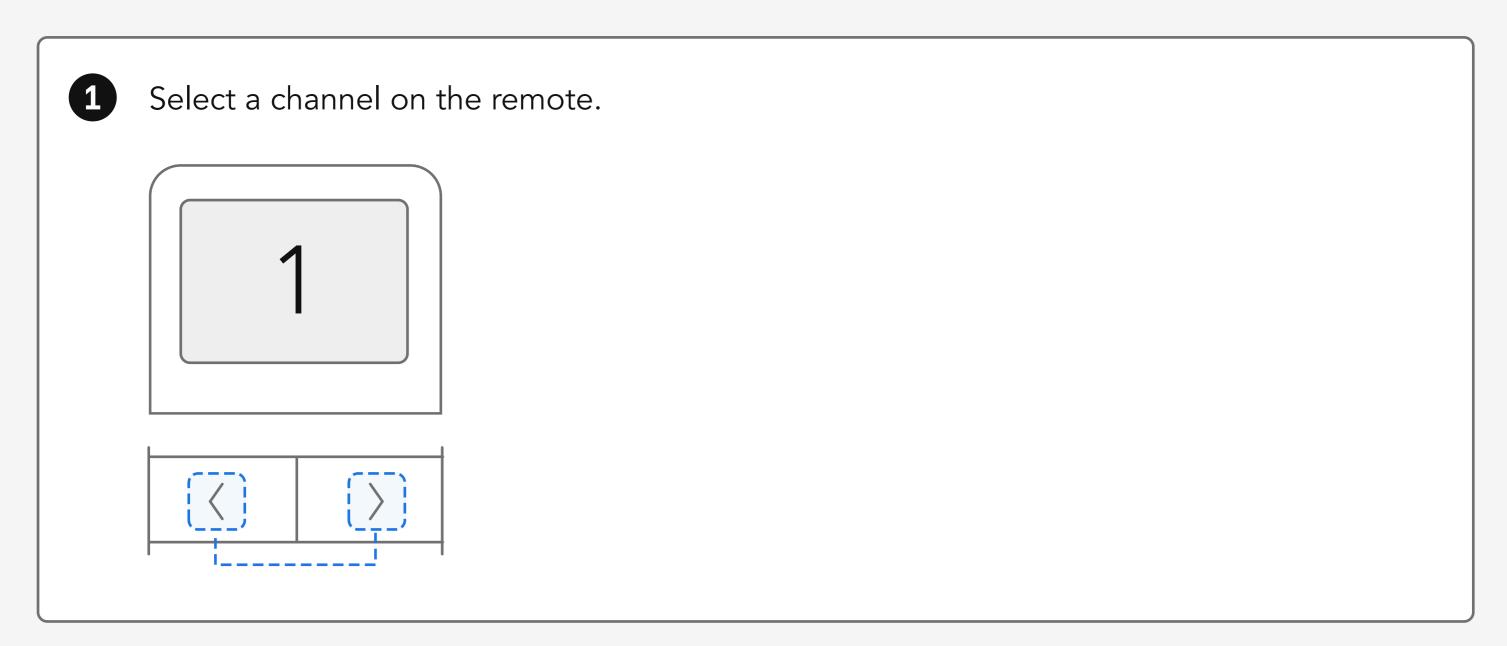

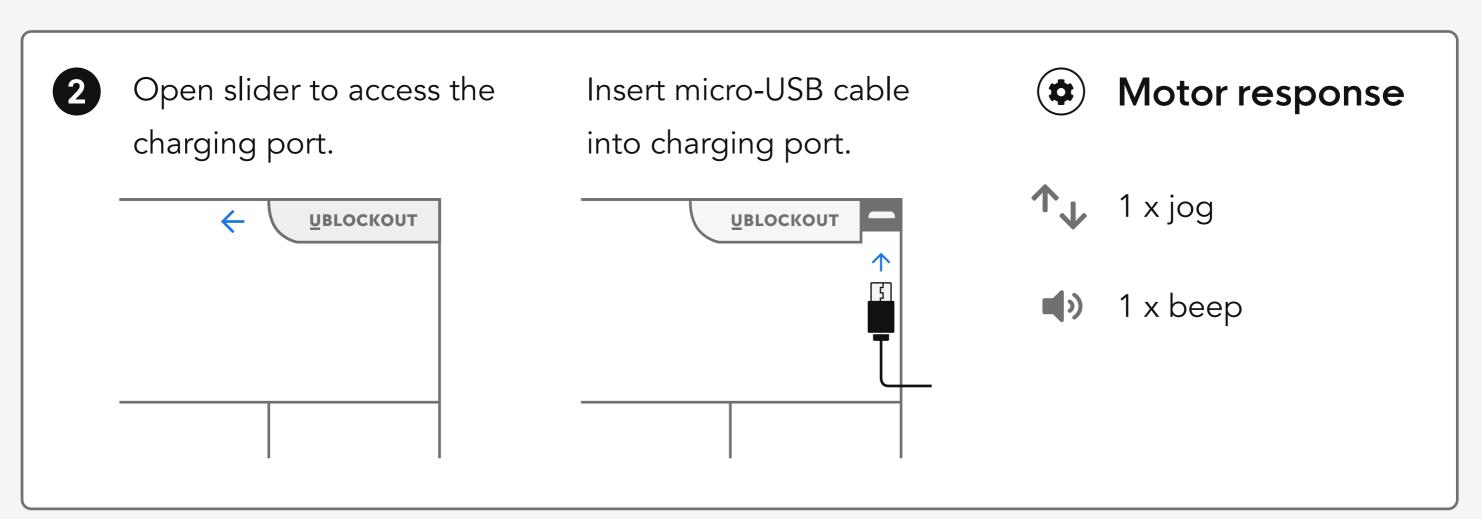

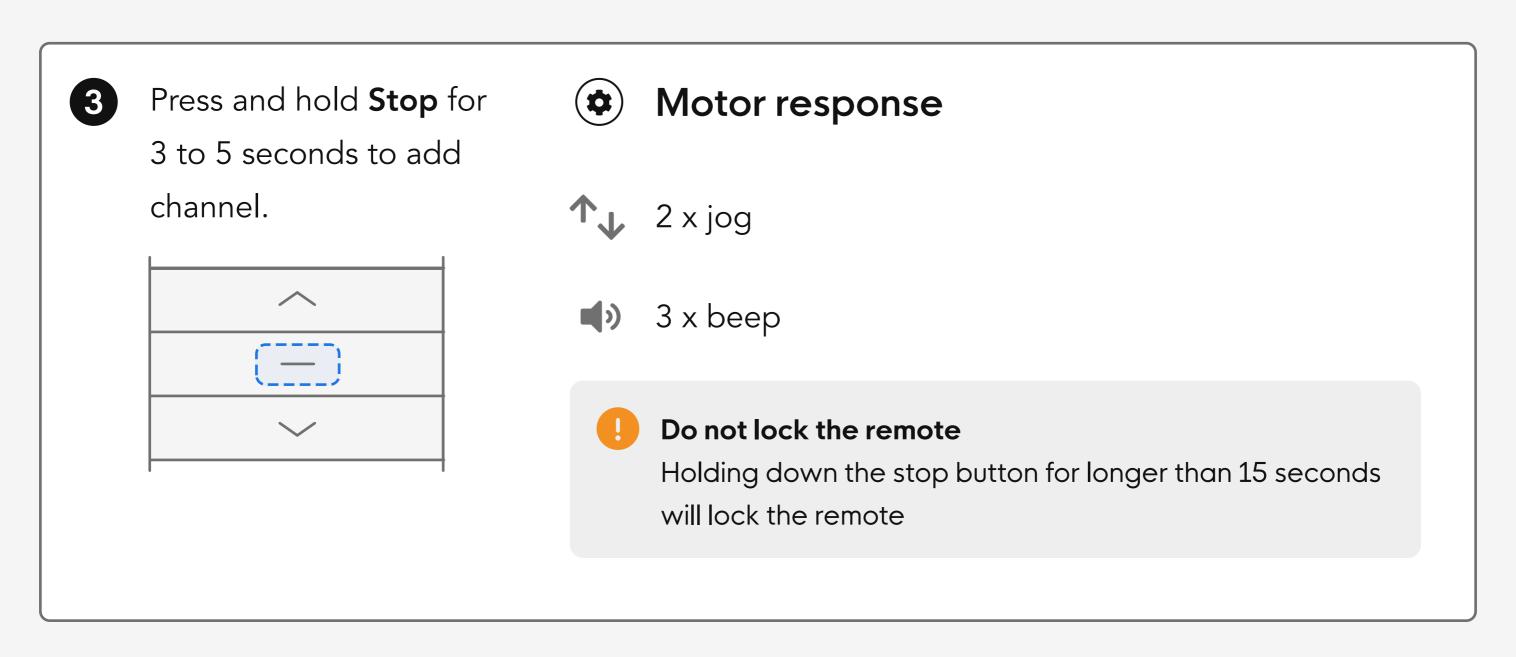

Setting limits

? Guide to pressing buttons


To avoid damage, practice a quick press and long press when shade is not near the top or bottom.

Quick press is a step motion = 'jogging' mode

Long press is a continuous motion = 'running' mode


Set an upper limit

Press and hold **Up** for 3 to 5 seconds to move shade to the desired highest position.

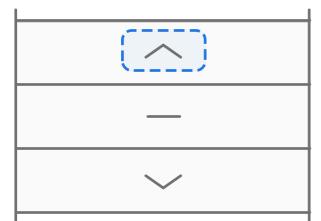

If using 'running' mode, be prepared to press **Stop** when the shade is 6 inches from the top. Then continue using 'jogging' mode to raise the shade.

2 Press **Stop** when at the desired highest position.

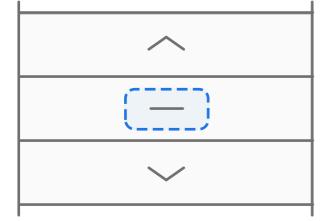

3 Press and hold **Up** and **Stop** for 3 to 5 seconds to save upper limit.



Motor response

3 to 5 seconds


 \uparrow_{\downarrow} 2 x jog

◄) 3 x beep

Setting limits


Set a lower limit

Press and hold **Down** for 3 to 5 seconds to move shade to the desired lowest position.

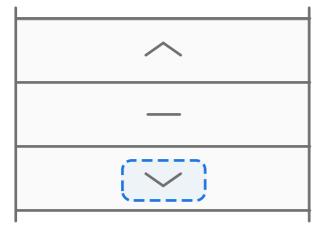

If using 'running' mode, be prepared to press **Stop** when the shade is 12 inches from the bottom. Then continue using 'jogging' mode to lower the shade.

2 Press **Stop** when at the desired lowest position.

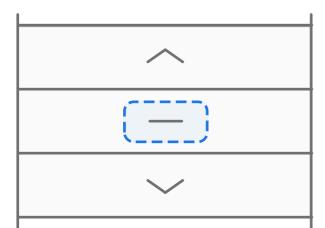

3 Press and hold **Down** and **Stop** for 3 to 5 seconds to save lower limit.



Motor response

3 to 5 seconds


↑ 2 x jog

√) 3 x beep


Setting positions

Set a favorite position


1 Move shade to the desired position by pressing **Up** or **Down**.

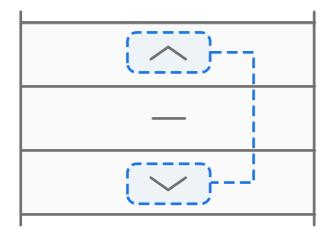

2 Remove battery cover and press **P2**.

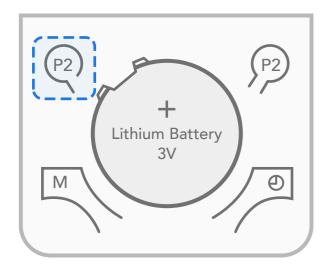

Motor response

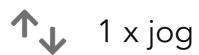 


■ 1 x beep


? How to remove the battery cover

Push the safety latch on the back to release the battery cover using a pen or pointed object

3 Press Stop.

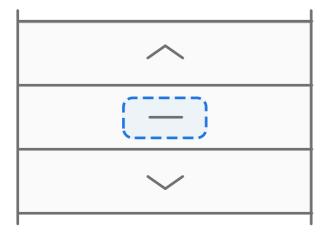


Motor response

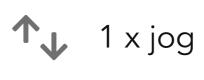 

1 x beep

4 Press **Stop** again and replace the battery cover.

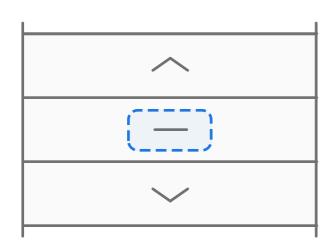

Motor response



◄) 3 x beep


1

WARNING


Not replacing the battery cover can cause serious injury to children if battery is swallowed


Setting positions


Send to favourite position

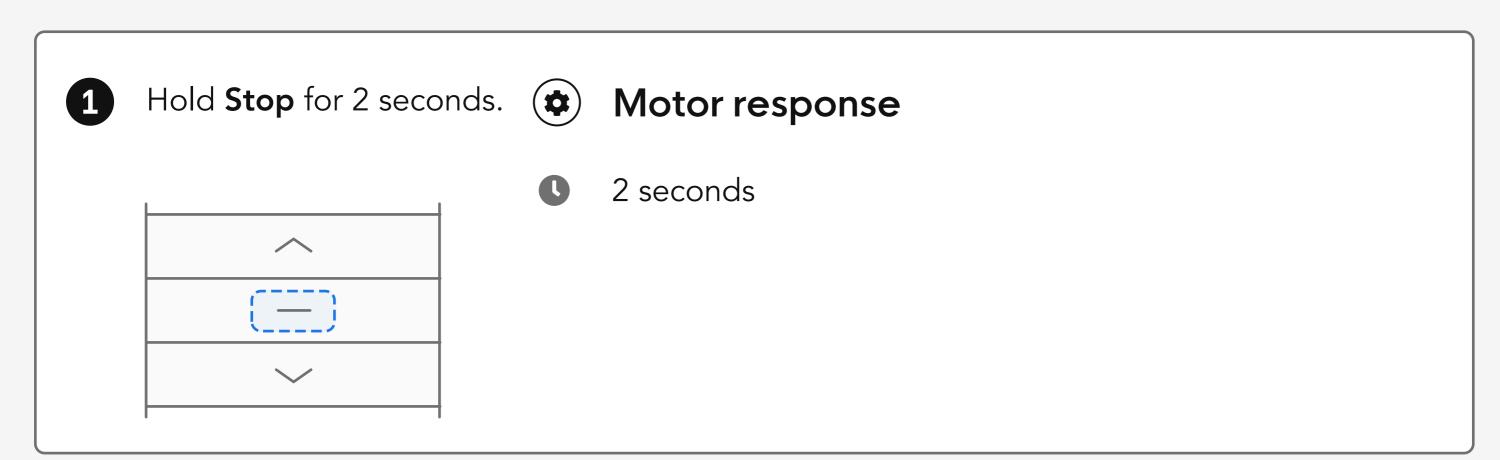

Delete a favorite position

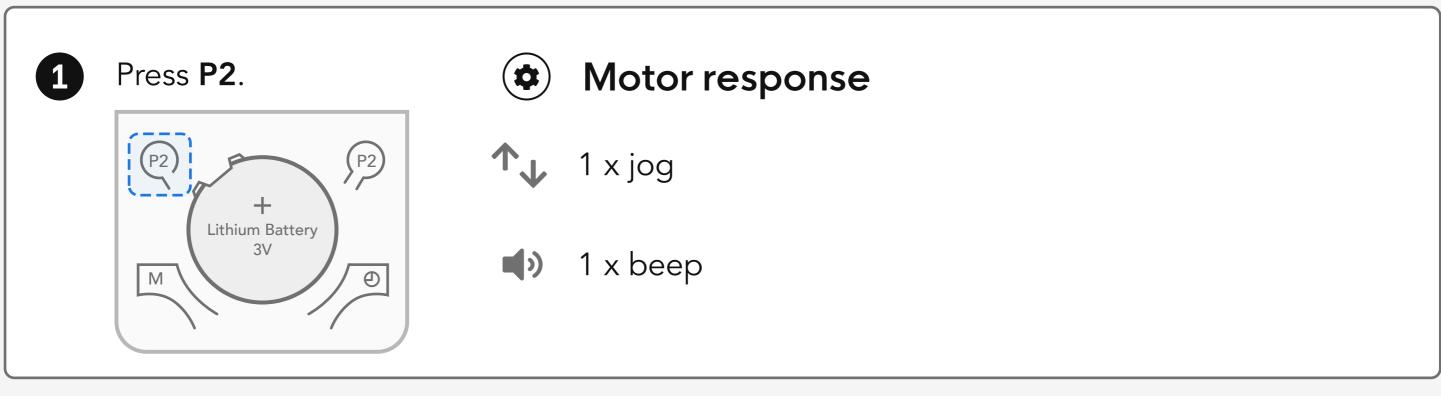

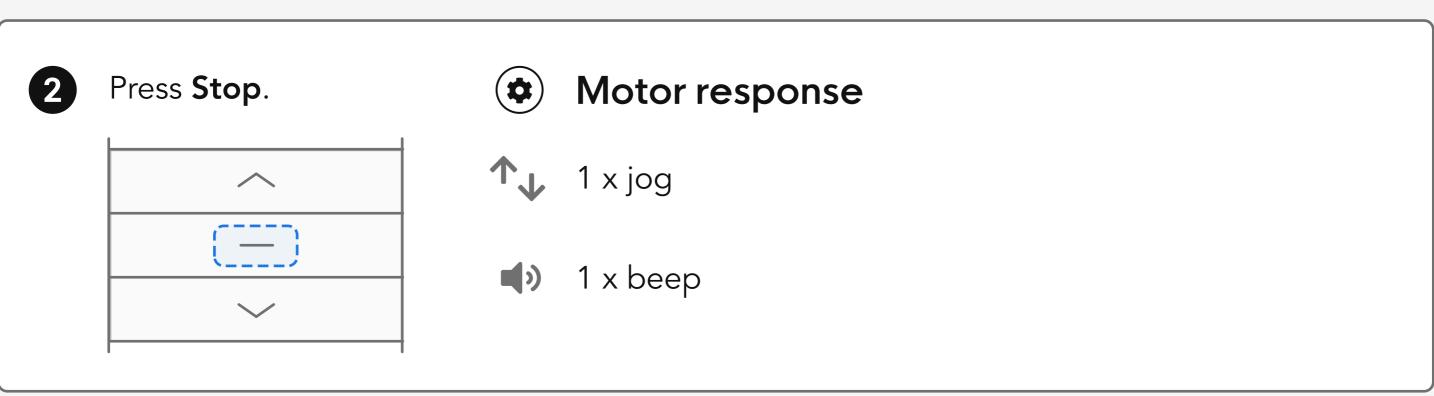


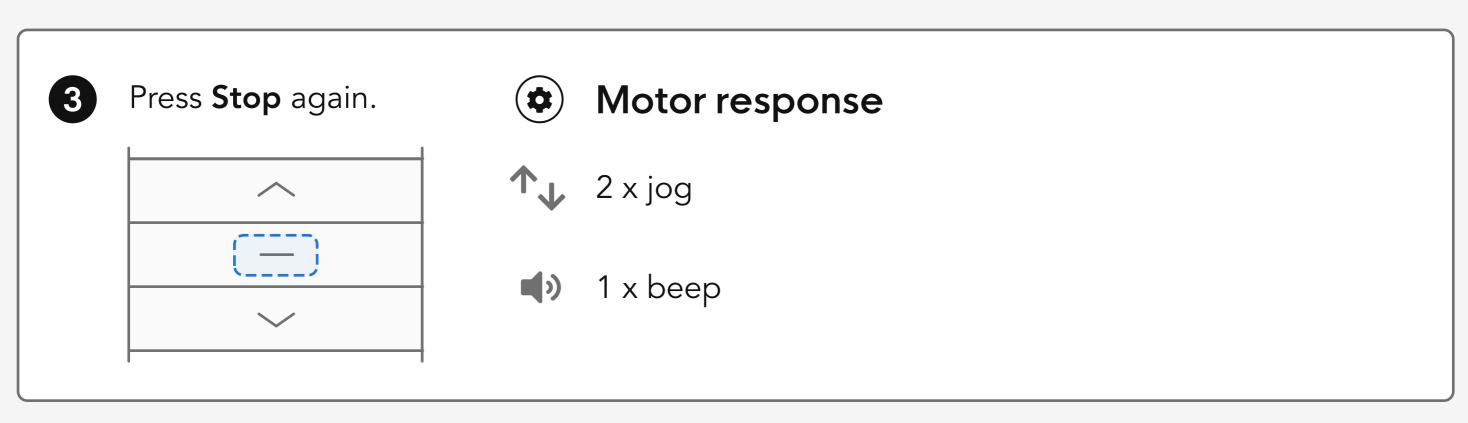


Adjusting limits

Adjust the upper limit

1 Hold **Up** and **Stop** for 3 to 5 seconds on the remote control.

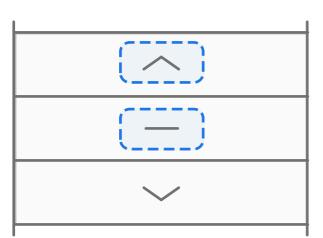

- Motor response
- 3 to 5 seconds
- ↑ 2 x jog
 - 1 x long beep
- 2 Move shade to desired position. Hold **Up** and **Stop** to save position.

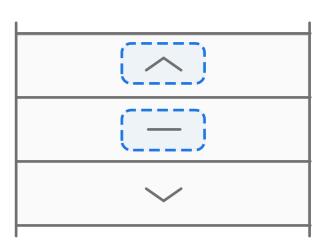


Adjust the lower limit

1 Hold **Down** and **Stop** for 3 to 5 seconds on the remote control.





- Motor response
- 3 to 5 seconds
- **↑** 2 x jog
- 1 x long beep
- 2 Move shade to desired position. Hold Down and Stop to save position.

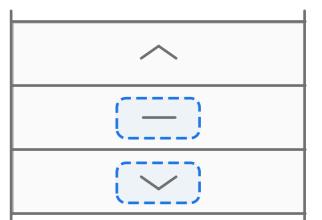


Removing shades from channels

Unpair shade from remote control channel

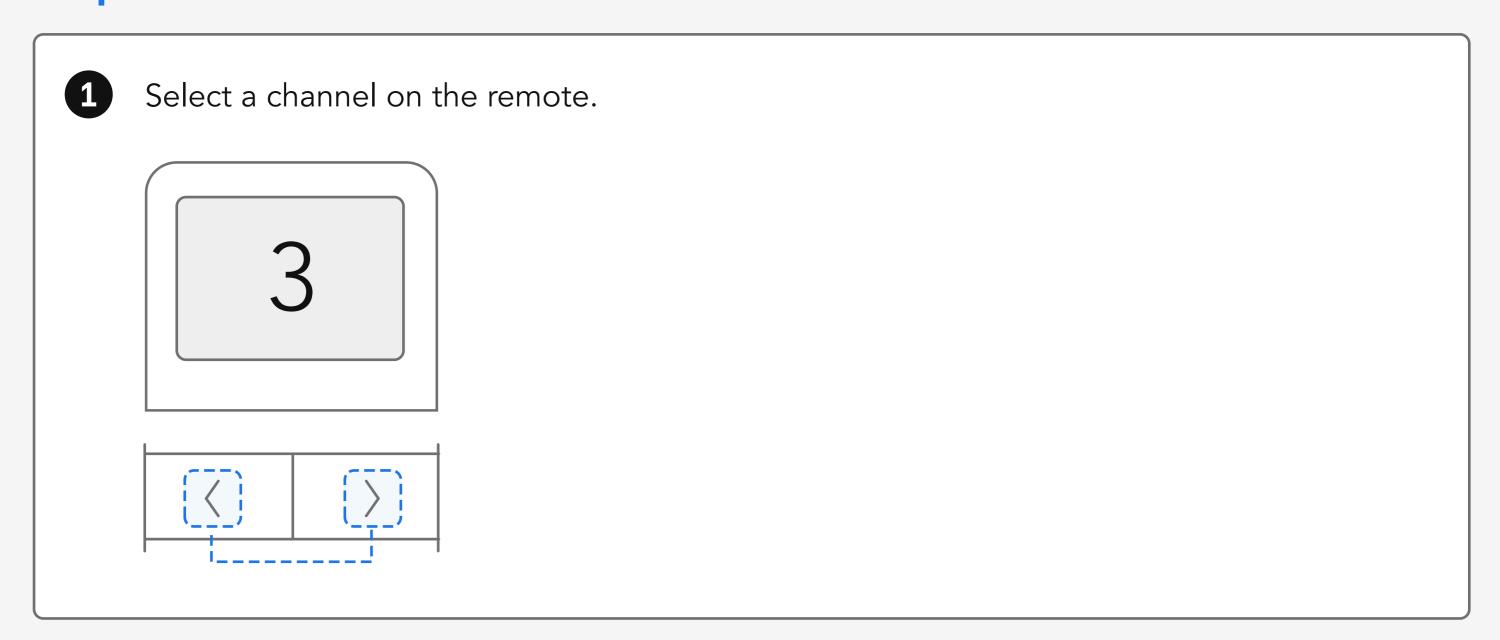

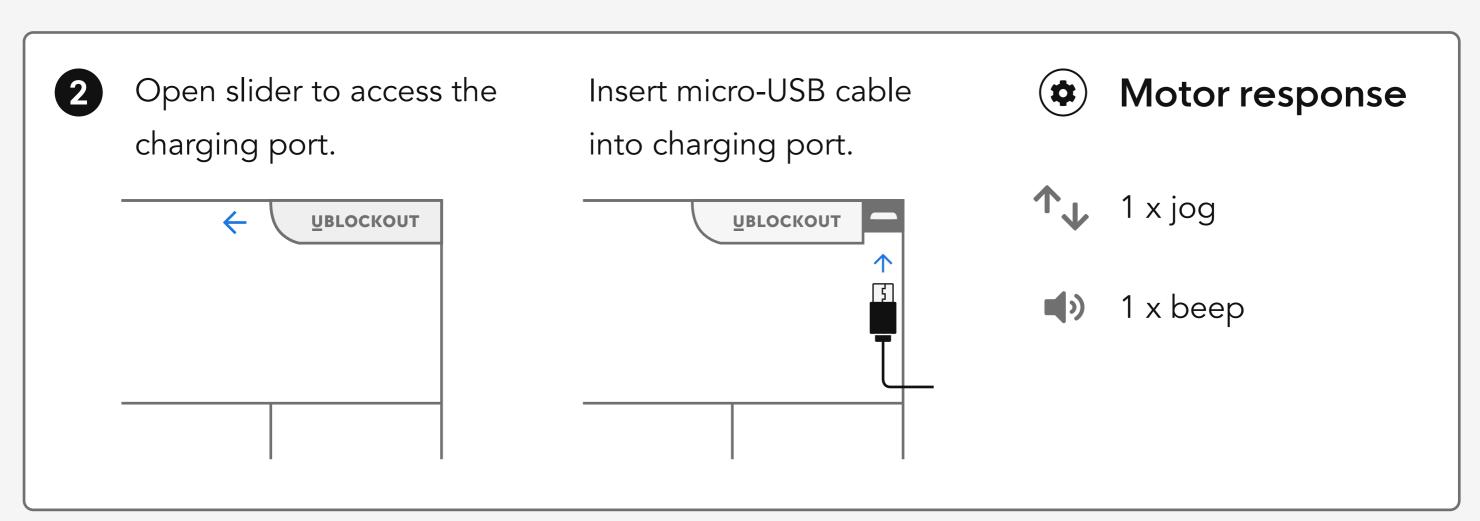

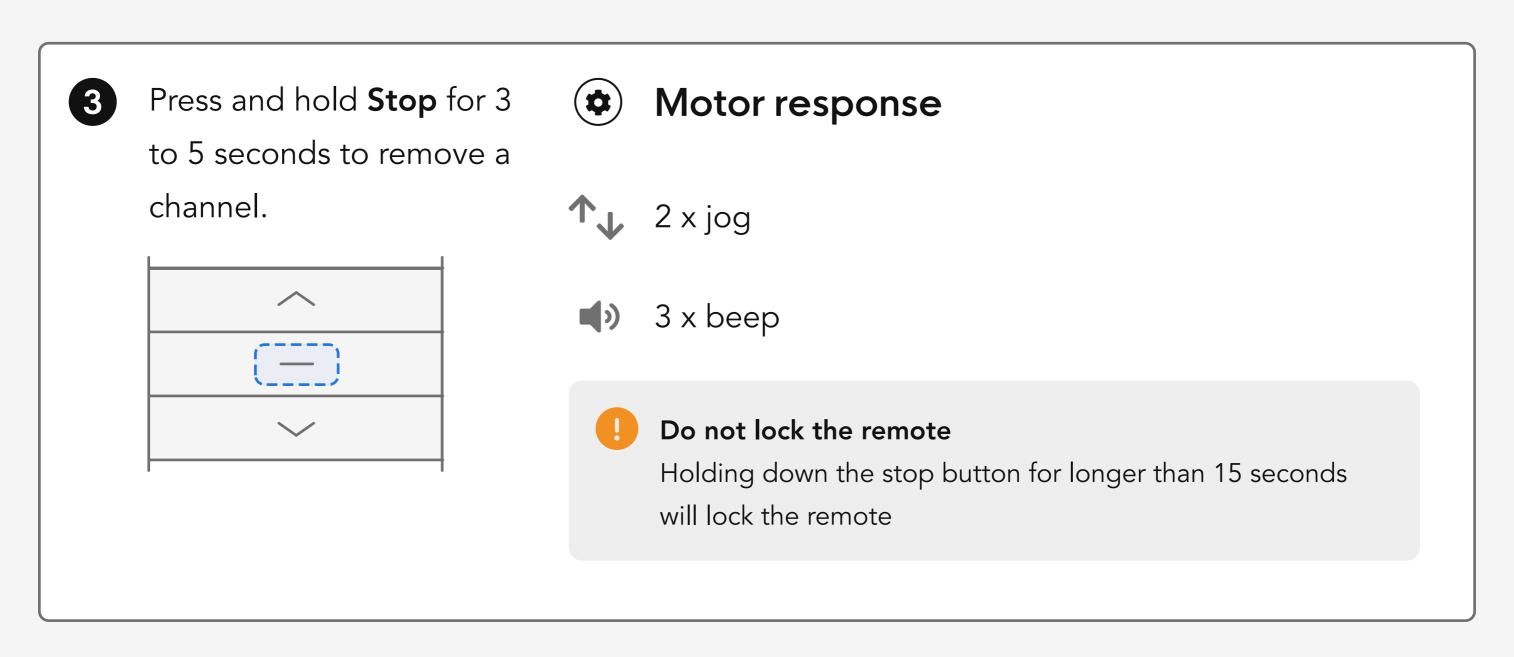

Troubleshooting motor issues

If the motor is not responding

Remote battery is discharged Replace the battery

Battery is inserted incorrectly Check battery polarity

Radio interference Check the remote is not near metal objects

Shade is too far from the remote Operate remote closer to the shade motor

Shade motor battery is low Charge shade motor with micro-USB cable

If the motor doesn't run

Poor electronic connection Check connections

Improper installation Check installation and troubleshoot

If the motor stops during operation

Shade reached lower limit Adjust the lower limit

Improper installation Contact UBlockout customer support

If the remote is not responding

LCD display is black Replace the empty battery

Remove battery contact tab

Support

We're here to help

For more information about setting up your shade motor and remote contact UBlockout customer support.

Our team is available from 9am to 6pm (CT). Select an option below and we'll be happy to help.

? UBlockout Customer Support

Call us: +1 888 411 6208

Email us: support@ublockout.com

Chat with us: Live chat at ublockout.com